


## Ex9IP

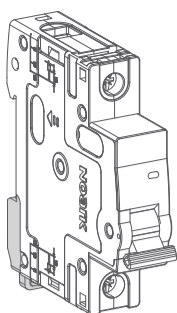

Isolator  
 Hlavní vypínač  
 Vypínač  
 Rozłącznik izolacyjny  
 Interrupitor  
 Hauptlastschalter  
 Interrupteur  
 Выключатель нагрузки  
 Закључваем в позицич OFF  
 Шалтер(товаров прекљсвач)  
 Rastavljač

**NOARK**

1

## Ex9IP

Mounting instructions  
 Montážní návod  
 Montážne inštrukcie  
 Instrukcja montażu  
 Istruzioni di assemblare  
 Montageanweisung  
 Instructions de montage  
 Инструкция по монтажу  
 Monteringsanvisning  
 Istruzioni di montaggio  
 Instrucciones de montaje  
 Összeszerelési útmutató

Asennusohjeita  
 Montage-instructies  
 Instruções de montagem  
 Navodila za montažo  
 Οδηγίες Εγκατάστασης  
 Инструкции за инсталиране  
 Monteringsvejledningen  
 Montažu upute  
 Surinkimo instrukcijos  
 Instalēšanas instrukcijas  
 Скупштина упутство  
 Paigaldusjuhendid


2

## Ex9IP

Caution: Installation by electricians only  
 Varování: Montáž pouze osobou s elektrotech. kvalifikací  
 Varovanie: Montáž iba osobou s elektrotech. kvalifikáciou  
 Uwaga: Montaż tylko przez uprawnionych instalatorów  
 Atenție: Instalare numai de către electricieni  
 Vorsicht: Montagenur durch Elektrofachkräfte  
 Attention: Montage uniquement par un électricien  
 Осторожно: Монтаж только электрика


3

## Ex9IP

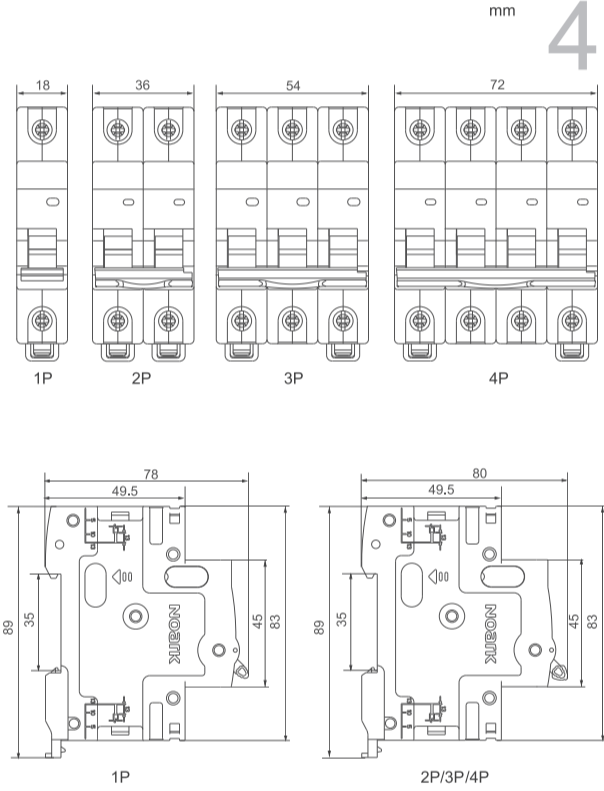


4

## Ex9IP

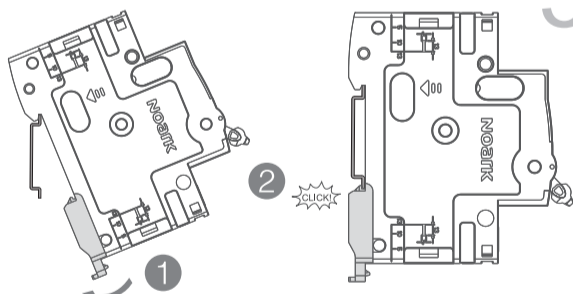

5


## Ex9IP

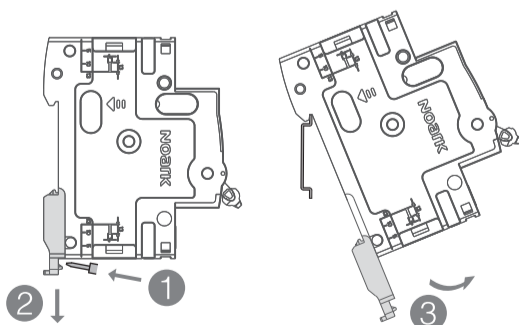







6

## Ex9IP

	1-35mm <sup>2</sup>
	2-3.5Nm

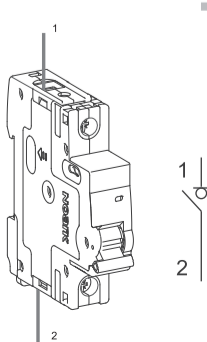

7

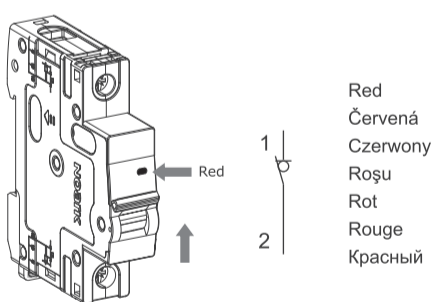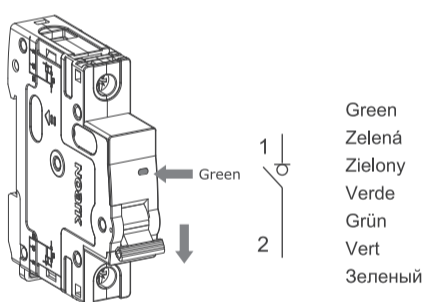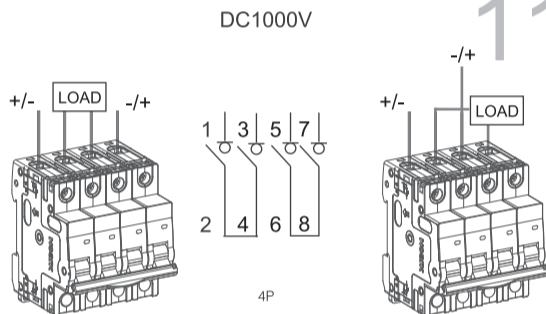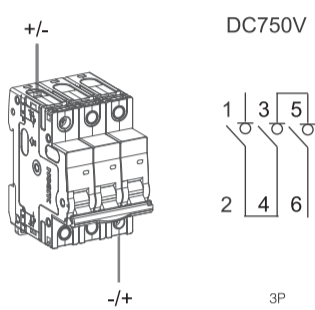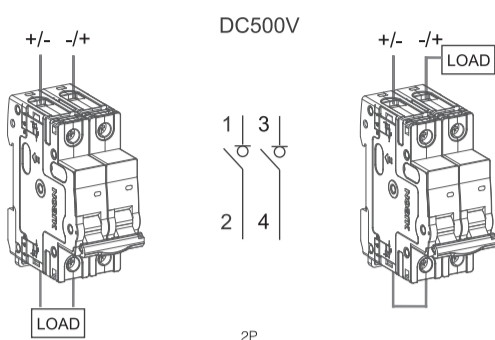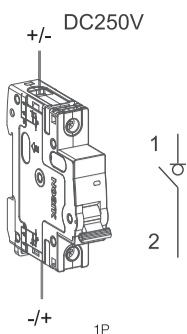

NOARK



Printed with environment-friendly paper

Copyright Noark. All Rights Reserved

www.noark-electric.eu